


CONCRETE SCREW EBS-HF

Mounting


ESSVE
GET IT DONE



1. Drill a hole. Roughly clean the drill hole from drill cuttings by moving the hammer drill back and forth 2-3 times.

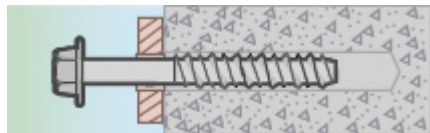

2. Tighten the screw with a socket. An impact wrench is recommended for dimensions 10.5 and 16.5 mm.

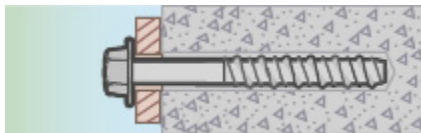

3. The installation is finished.